Northern International Inc.

READ AND SAVE THESE INSTRUCTIONS

GL23946T

SOLAR FLICKERING LANTERN

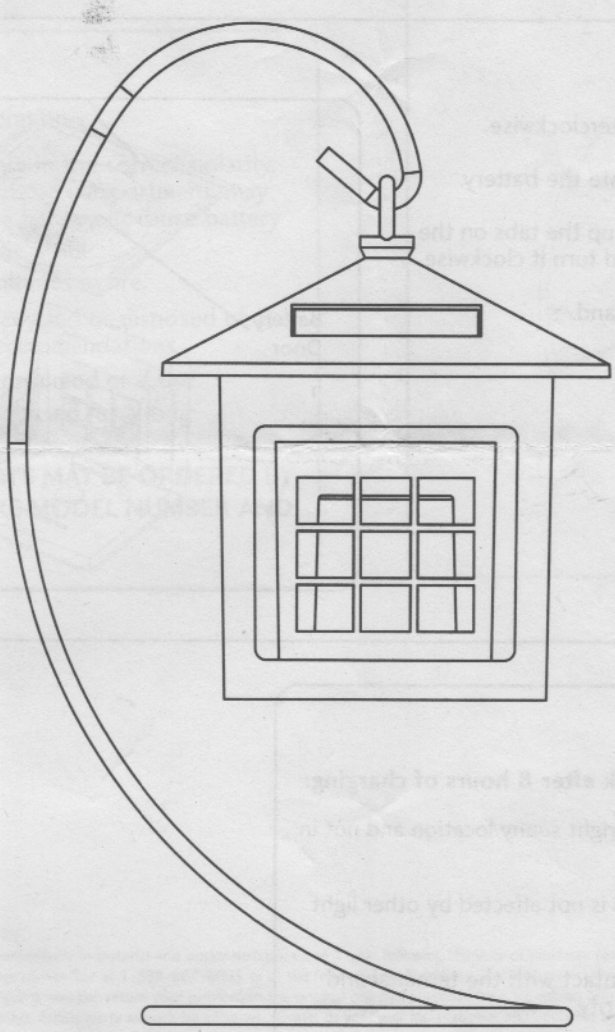

Dear Customer,

Congratulations on your purchase. Our products will help to enhance the beauty of your garden and provide many years of enjoyment. To ensure the maximum performance of your Solar Flickering Lantern, please read and save these instructions.

CUSTOMER SERVICE

1-888-867-6095 • customerservice@niinorthern.com

INST-TARGETGL23946T-0621-02-EN

1. How your Solar Powered Fixture works

During the day, the solar panel converts sunlight into electricity and recharges the battery. At night, the light turns on automatically using the electricity stored during that day.

The number of hours the light stays on depends on your geographical location, weather conditions and seasonal sunlight availability.

Place the solar light fixture in an area where it can receive direct sunlight for at least 8 hours each day. Shadowed locations will not allow the battery to charge fully and will reduce the hours of nighttime lighting. The selected location should not be near nighttime light sources, such as porch lights, streetlights or pool lights, as these may cause the solar light to turn off prematurely.

2. First time use

Remove the orange pull-tab from the solar light. Place the solar light in a location where it can receive a full 8 hours of sunlight to allow the rechargeable battery to reach maximum capacity.

3. Fixture Assembly

3.1 To remove the top, twist it counterclockwise.

3.2 Remove orange pull-tab to activate the battery.

3.3 Replace the lantern top by lining up the tabs on the base and the slots on the top and turn it clockwise.

3.4 Hang the lantern on the table stand.

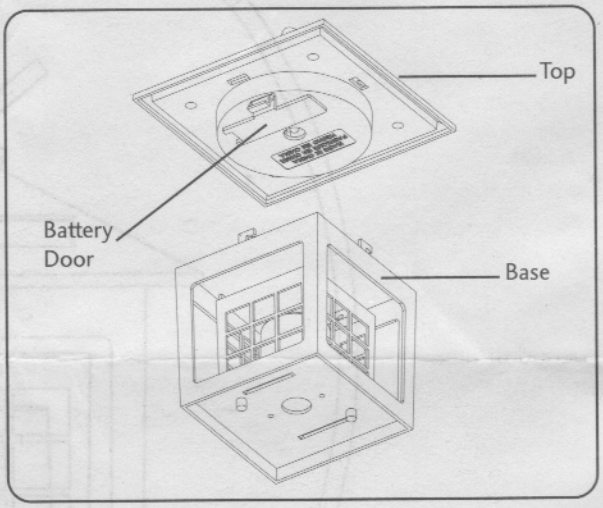

4. Troubleshooting

If the light does not turn on at dusk after 8 hours of charging:

- Ensure that the solar lantern is in a bright sunny location and not in a shady area (during the day).
- Make sure that the fixture's photocell is not affected by other light sources (at night).
- Verify that the battery is making contact with the terminal and that it is insered in the proper polarity.
- Make sure that the orange tab has been removed.

5. Battery Replacement

NOTE: This operation should be done in the morning on a sunny day. This will allow the lantern to receive a full 8 hours of sunlight so that the rechargeable battery can reach maximum capacity.

- Remove the top by turning it counterclockwise.
- Remove the battery cover from the body.
- Remove the old battery and replace with new rechargeable AA size 1.2 V 600mAh battery.
- Attach the top cover and the body together by lining up the tab and slot and turning the top clockwise.

6. CAUTION

- Safe for outdoor operation.
- Failure to insert battery in the correct polarity, as indicated in the battery compartment, may shorten the life of the battery or cause battery to explode or leak.
- Do not dispose of batteries in fire.
- Batteries should be recycled or disposed of as per manufacturer's recommendations.
- Remove batteries if consumed or if the product is to be left unused for a long period of time.
- **REPLACEMENT PARTS MAY BE ORDERED BY USING THE FIXTURE MODEL NUMBER AND THE PART'S NAME.**

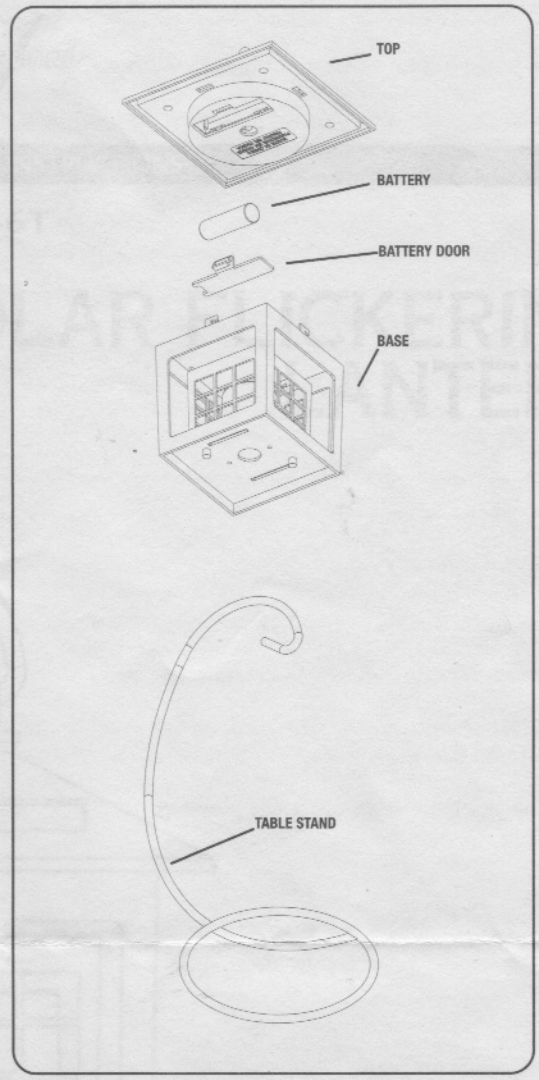

ONE (1) YEAR LIMITED WARRANTY

This product is guaranteed to be free from defects in material and workmanship for one 1 year following the date of purchase (excluding the battery/batteries). Should a defect occur within the warranty period, please contact our customer service line at 1-888-867-6095 or at the following email address: customerservice@niinorthern.com. A proof of purchase (sales receipt) is required. If we cannot replace the defective part you require, you can return your product to the original point of purchase for a full refund or a replacement product. The consumer is responsible for the removal of and reinstallation of the product. Damage to any parts as such by accident, misuse, or improper installation is NOT covered by this warranty. Our policy does not include liability for incidental or consequential damages. Some states or provinces do not allow the exclusion or limitation of consequential damages; therefore, the above exclusion may not apply to you. This warranty gives you specific legal rights and you may also have other rights that vary from place to place.

CUSTOMER SERVICE

1-888-867-6095 • customerservice@niinorthern.com